



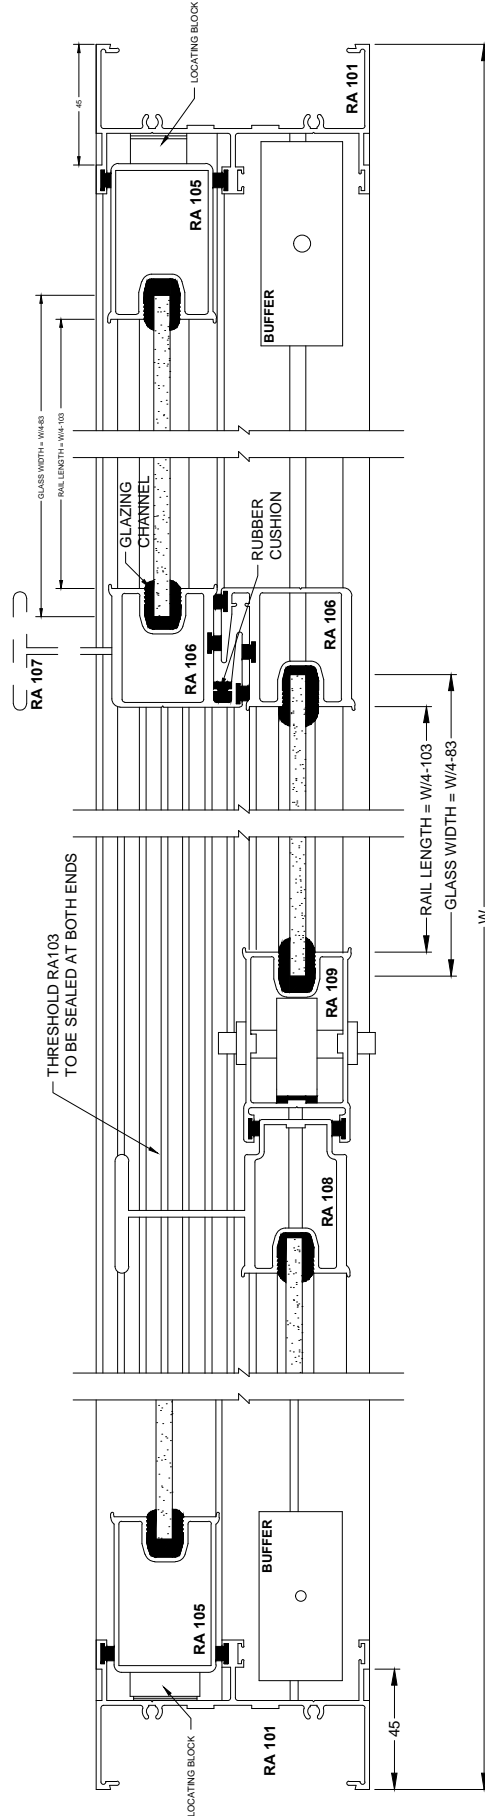

**APARTMENT DOOR
ASSEMBLY DRAWINGS**

"Small enough to know you, Big enough to serve you"



APARTMENT DOOR ASSEMBLY - OXXO

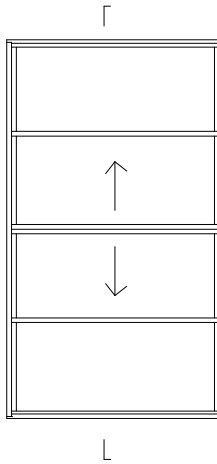


WIDTH FORMULA FOR OXXO DOOR

HEAD/SILL = $W - 66$
 RAIL = $(W - 414) / 4$
 GLASS = $(W - 334) / 4$
 THRESHOLD = $(W - 174) / 2$

APARTMENT DOOR ASSEMBLY - XO DOOR

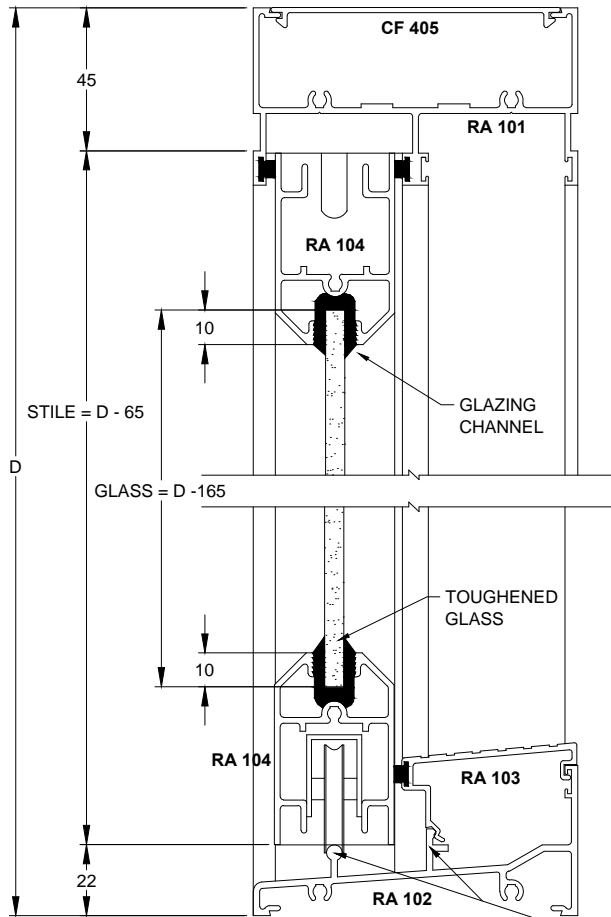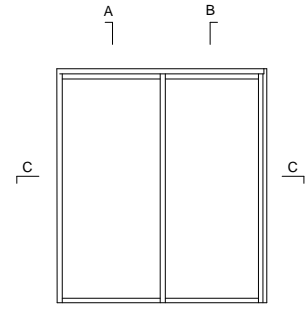


A - A

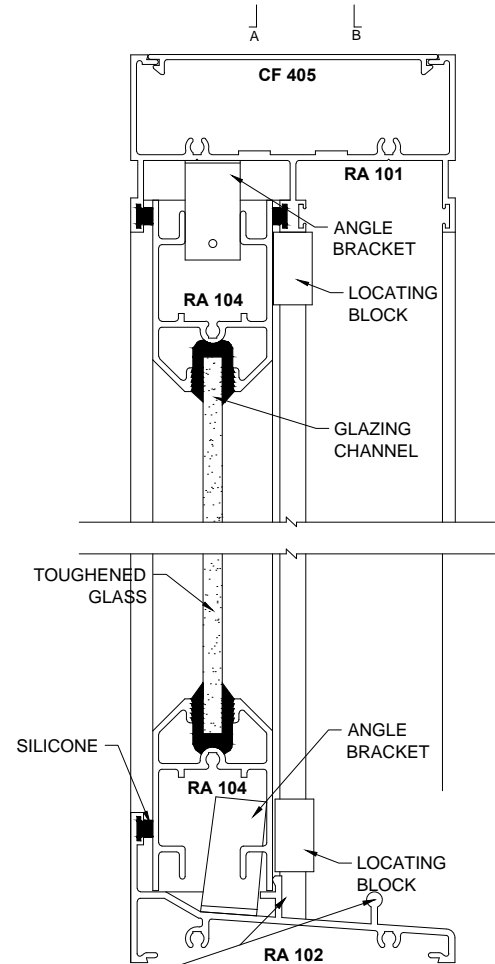

B - B

20X5 DRAINAGE
SLOT@300CTS
BOTH ENDS

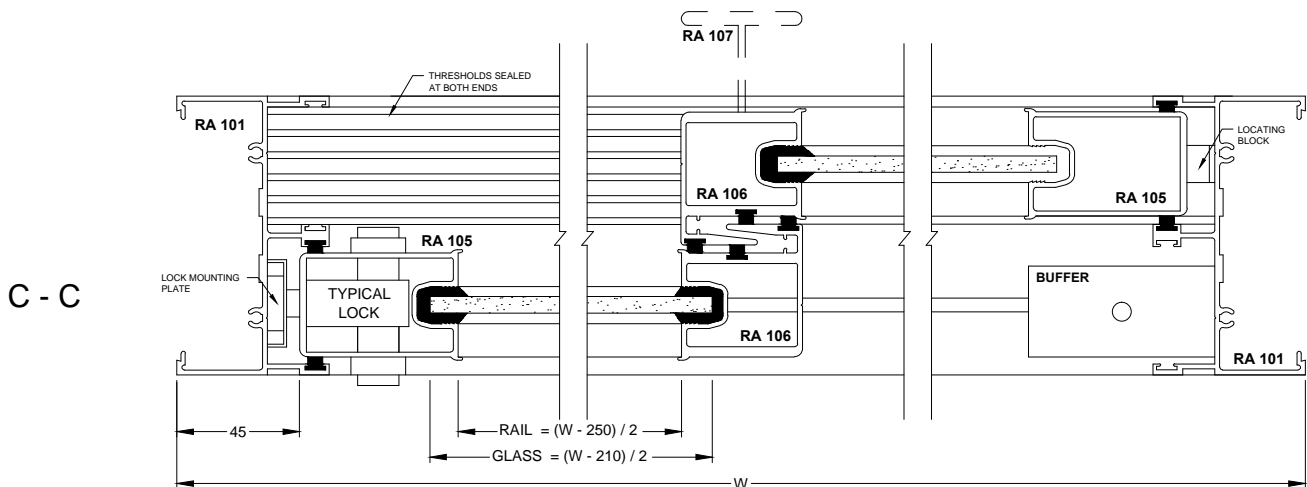


C - C

WIDTH FORMULA FOR XO DOOR

HEAD/SILL	= W - 66
RAIL	= (W - 250) / 2
GLASS	= (W - 210) / 2
THRESHOLD	= (W - 112) / 2



APARTMENT DOOR ASSEMBLY - OXOL

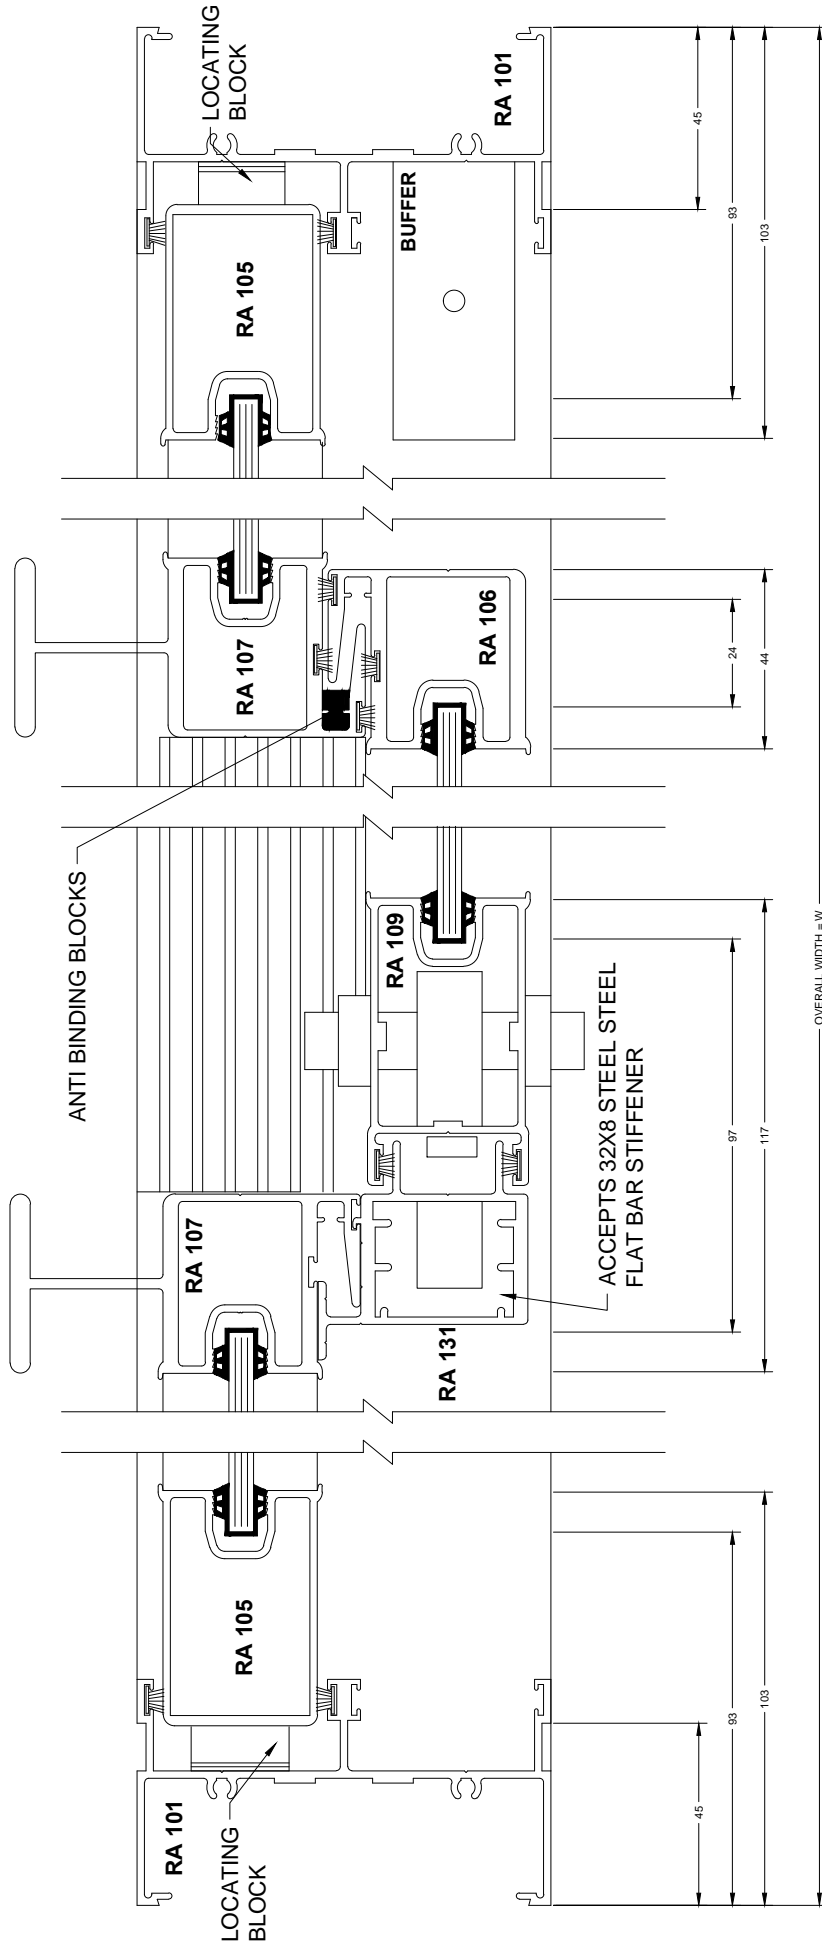


WIDTH FORMULA FOR OXO DOOR

- HEAD/SILL = W - 66
- RAIL = (W - 366) / 3
- GLASS = (W - 306) / 3
- THRESHOLD = (W - 150) / 3

APARTMENT DOOR 47mm SILL, DOUBLE GLAZED

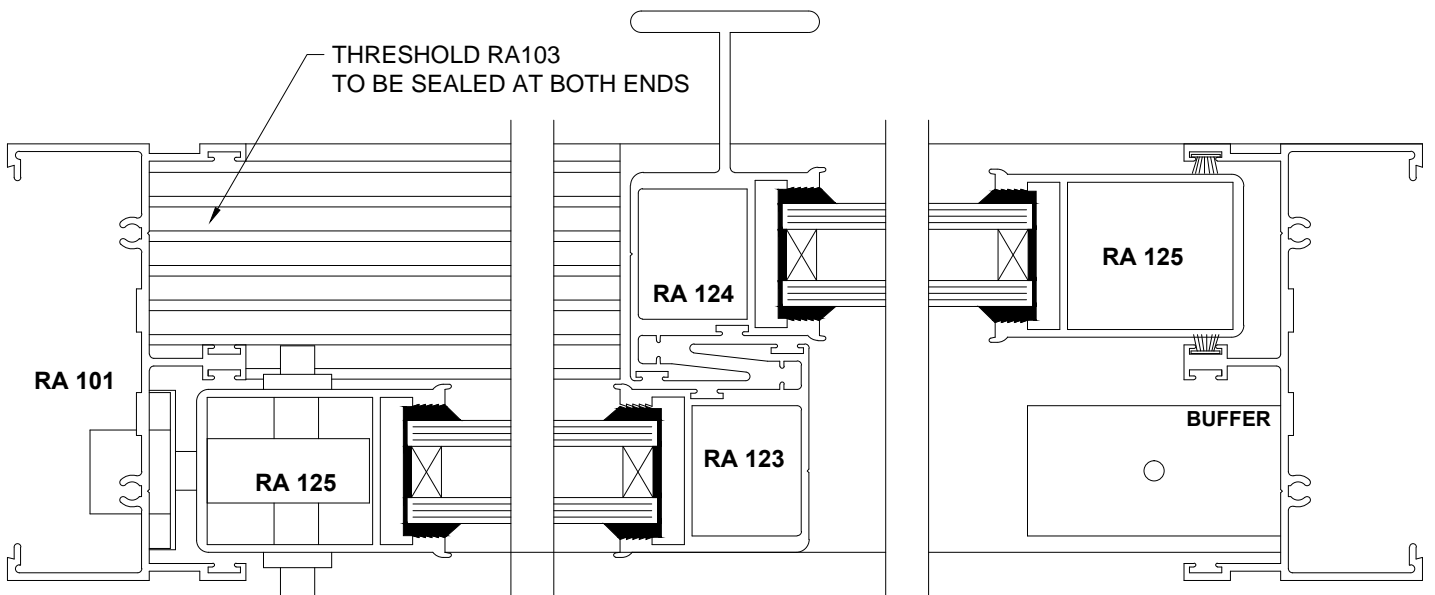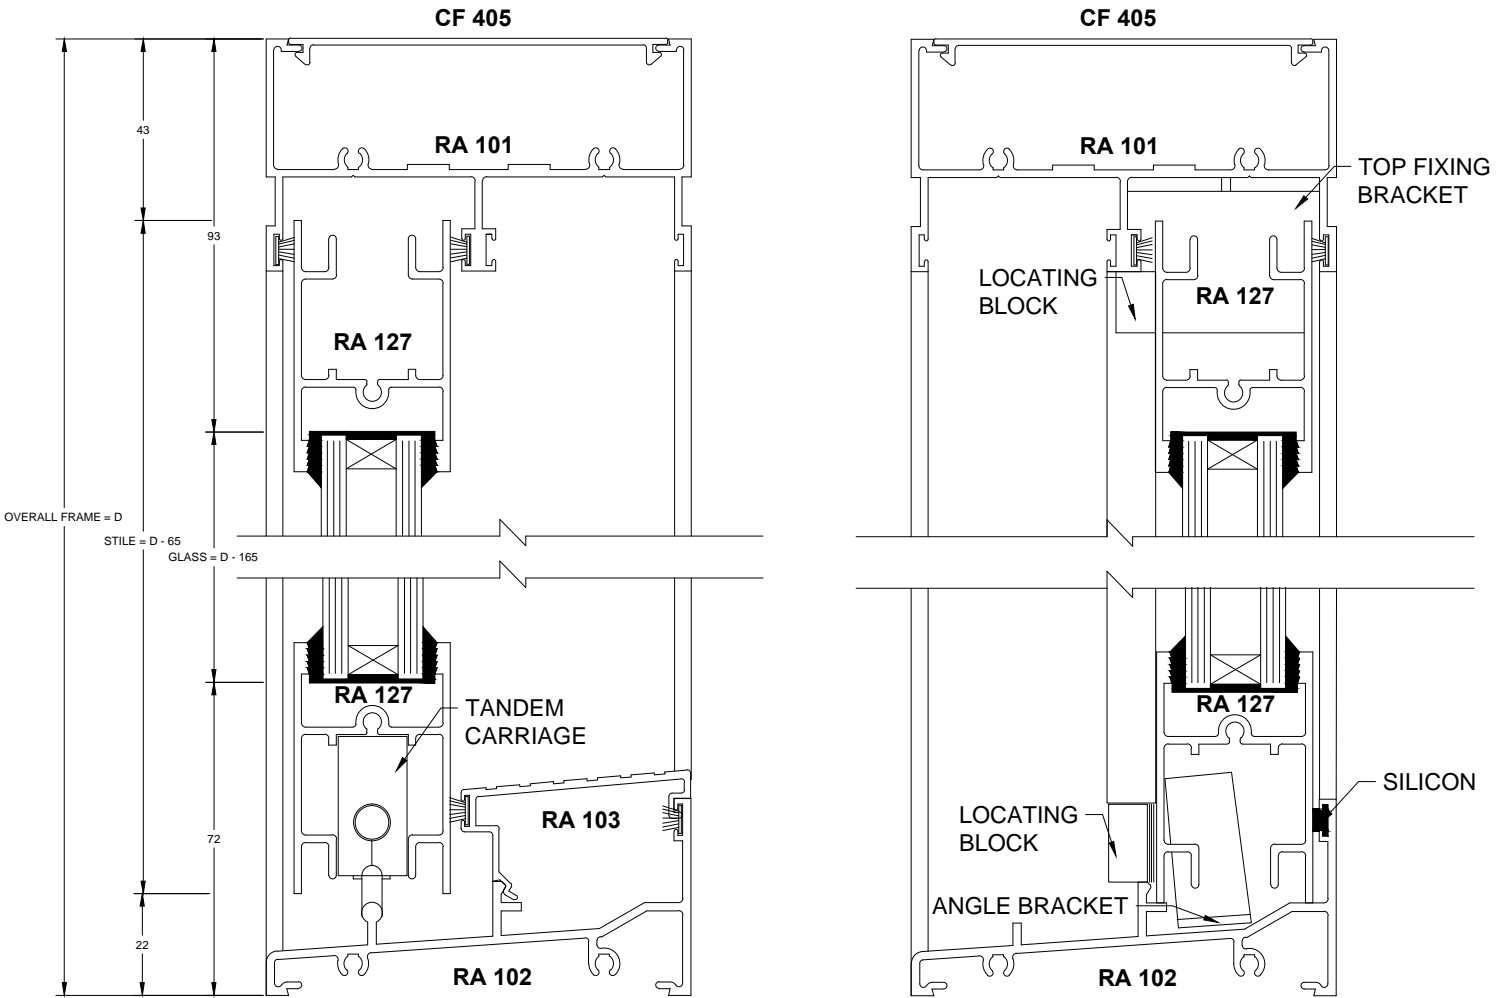

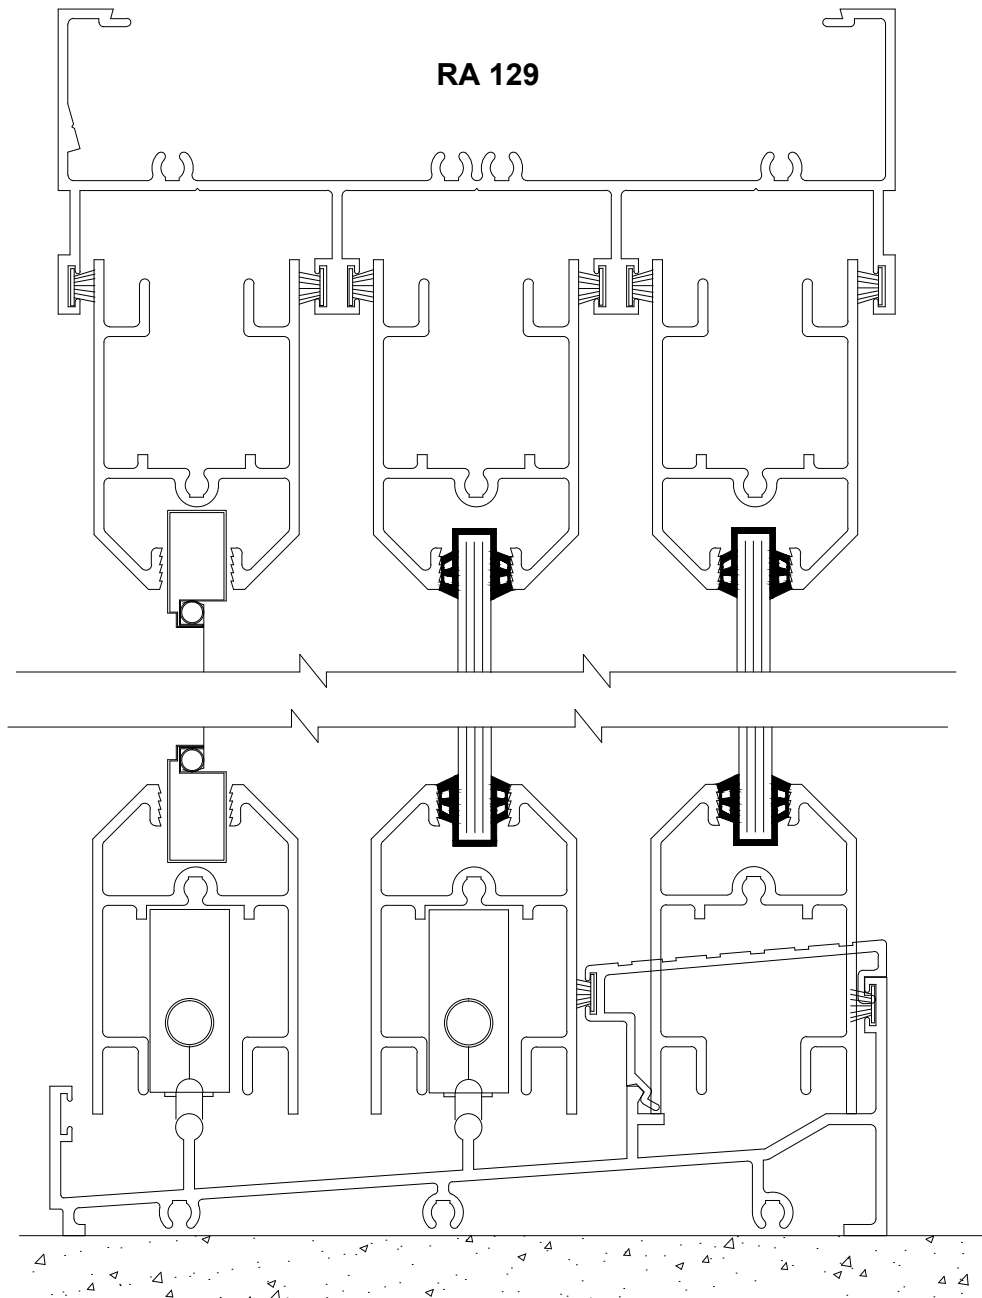

RA 130

NOTE: IF FLYDOORS ARE FITTED USING THIS METHOD

(1) A CUSTOM BUGSEAL IS REQUIRED ON THE TRAILING EDGE OF THE FLYDOOR

(2) CARE NEEDS TO BE TAKEN WITH THE SELECTION OF LOCKS, THIS DETAIL REQUIRES

(a) A RESIDENTIAL LOCK WITH FLAT EXTERNAL FACE PLATE

(b) A COMMERCIAL LOCK WHERE THE EXTERNAL PULL OR CYLINDER DOES NOT PROJECT FROM THE FACE OF THE DOOR STILE

APARTMENT DOOR CUTTING/ NOTCHING

RA 101	LHS JAMB	
	RHS JAMB	
	HEAD	
RA 102		
RA 103	XO	
	OXXO	

APARTMENT DOOR CUTTING/ NOTCHING

RA 104	XO		
	OXXO		
RA 105			
RA 106			
RA 107			
RA 108			
RA 137			
RA 139			

APARTMENT DOOR CUTTING/ NOTCHING

<p>RA 109</p>	
<p>CF 405</p>	